

XB2 Pilot Light & Pushbutton



XB2-BA3341C

Description	Contact type	Color	Reference
Flat	N/O	Green	XB2-BA3311 ZB2BZ101+ZB2BA331
		White	XB2-BA3341 ZB2BZ101+ZB2BA334
		Black	XB2-BA3351 ZB2BZ101+ZB2BA335
		Red	XB2-BA4322 ZB2BZ102+ZB2BA432
		Stop	XB2-BA4342 ZB2BZ102+ZB2BA434
		Red	XB2-BL4322 ZB2BZ102+ZB2BA432
Protruding	N/C	Stop	XB2-BL4342 ZB2BZ102+ZB2BA434




XB2-BL31

Description	Contact type	Color	Reference
Flat	N/O	Black	XB2-BL21 ZB2BZ101+ZB2BL2
		Green	XB2-BL31 ZB2BZ101+ZB2BL3
		Yellow	XB2-BL51 ZB2BZ101+ZB2BL5
		Blue	XB2-BL61 ZB2BZ101+ZB2BL6
		Black	XB2-BL22 ZB2BZ102+ZB2BL2
		Red	XB2-BL42 ZB2BZ102+ZB2BL4
		Black	XB2-BP21 ZB2BZ101+ZB2BP2
		Green	XB2-BP31 ZB2BZ101+ZB2BP3
		Yellow	XB2-BP51 ZB2BZ101+ZB2BP5
		Blue	XB2-BP61 ZB2BZ101+ZB2BP6
		Red	XB2-BP42 ZB2BZ102+ZB2BP4
		Black	XB2-BC21 ZB2BZ101+ZB2BC2
		Green	XB2-BC31 ZB2BZ101+ZB2BC3
		Yellow	XB2-BC51 ZB2BZ101+ZB2BC5
		Blue	XB2-BC61 ZB2BZ101+ZB2BC6
Mushroom head Φ40mm	N/O	Red	XB2-BC42 ZB2BZ102+ZB2BC4
		N/C	



XB2-BP31

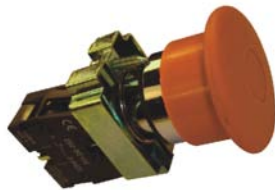

XB2-BC42

Explain	Contact type	Key removal	Reference
2 positions stay put	N/O	left	XB2-BG21 ZB2BZ101+ZB2BG2
		left or right	XB2-BG41 ZB2BZ101+ZB2BG4
	N/C+N/O	left	XB2-BG25 ZB2BZ105+ZB2BG2
		left or right	XB2-BG45 ZB2BZ105+ZB2BG4
2 positions stay put 1 Return from right to left	N/O	left	XB2-BG61 ZB2BZ101+ZB2BG6
2 positions stay put	N/C+N/O	left or right	XB2-BG65 ZB2BZ105+ZB2BG6
3 positions stay put	N/O+N/O	center	XB2-BG33 ZB2BZ103+ZB2BG3
		left or right	XB2-BG53 ZB2BZ103+ZB2BG5
		all 3 position	XB2-BG03C ZB2BZ103C+ZB2BG0C
		center	XB2-BG73C ZB2BZ103C+ZB2BG7C



XB2-BG21